

# **SENTEX TELE-ENTRY RESIDENTS USER GUIDE**

## **RESIDENT ENTRY**

1. When using a 4 or 5 digit entry code to enter, pull up to the Tele-entry keypad and enter your personal entry code. Then pull up to the gate, wait until the gate is fully open then continue through. The gate will close automatically.
2. When using a transmitter to enter: simply pull up to the gate, depress the transmitter button and wait for the gate to fully open then proceed through. The gate will close automatically.

## **GUEST ENTRY**

Guests will utilize the Sentex Infinity Tele-Entry. A guest will view the directory for the residents' last name and will enter the 3-digit code listed beside it. The tele-entry will call the residence home via phone line. The resident will have a 60 second talk time to allow or deny entry to the community. Simply by pressing "9" for granting access or hanging up their phone to deny access.

## **EXITING YOUR COMMUNITY**

The vehicle will pull up on an inground loop located prior to the exit gate. The gate will open and once the vehicle has exited through the gate, the gate will close automatically.

## **IMPORTANT NOTE:**

Your gate system is designed to allow only **ONE** vehicle through at a time. This means **no tailgating**. If you do not use the system as described above, you run the risk of having the gates close on your vehicle resulting in damage to the vehicle and gate. Your gate system is designed for vehicles and not to be used as a pedestrian walk through.